


Radiator Replacement Instruction Manual



1 Cool the engine before start. Drain the coolant in the old radiator through the drain plug. Put the used coolant into appropriate container for disposal. Please refer to your regulation to dispose used coolant.

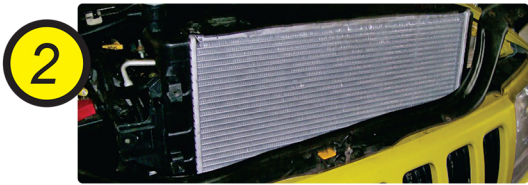

2 Replace the used radiator with the new one.



3 Fill the new coolant into the radiator, only use coolant that recommended by automobile company.



4 Measure the voltage from the battery into the radiator. The voltage should not exceed 0.10 volt.





5 Please check if the filler cap pressure suitable with the car.



6 Check the important components such as filler cap and rubber hose. Filler cap must be free from rust and rubber hose must be free from leak.

Congratulations. Your new radiator already installed.

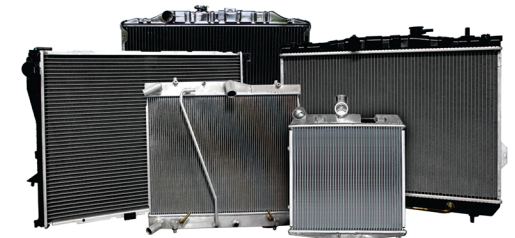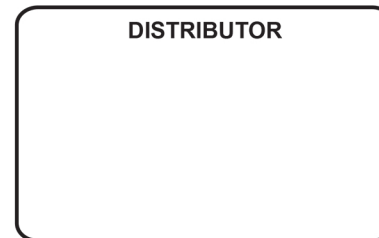

High Quality Radiator Products with High Performance